



Packing List

- Rear Fireback
- (2) Side Firebacks


NOTE The firebacks are 2-sided. When installing, use the desired pattern.

Installation

WARNING Turn off gas to the appliance and make sure it has fully cooled prior to conducting service.

- 1 Remove the glass frame and logs (see the manual for details).
- 2 Remove the burner (see the manual for details).
- 3 On the DVL GSR, bend the accent light down.
- 4 Install the rear fireback (see the directions below).

Hold the rear fireback face down, slide the top behind the baffle on top of the firebox, and pivot it back into place. It rests on the shelf at the back of the firebox.

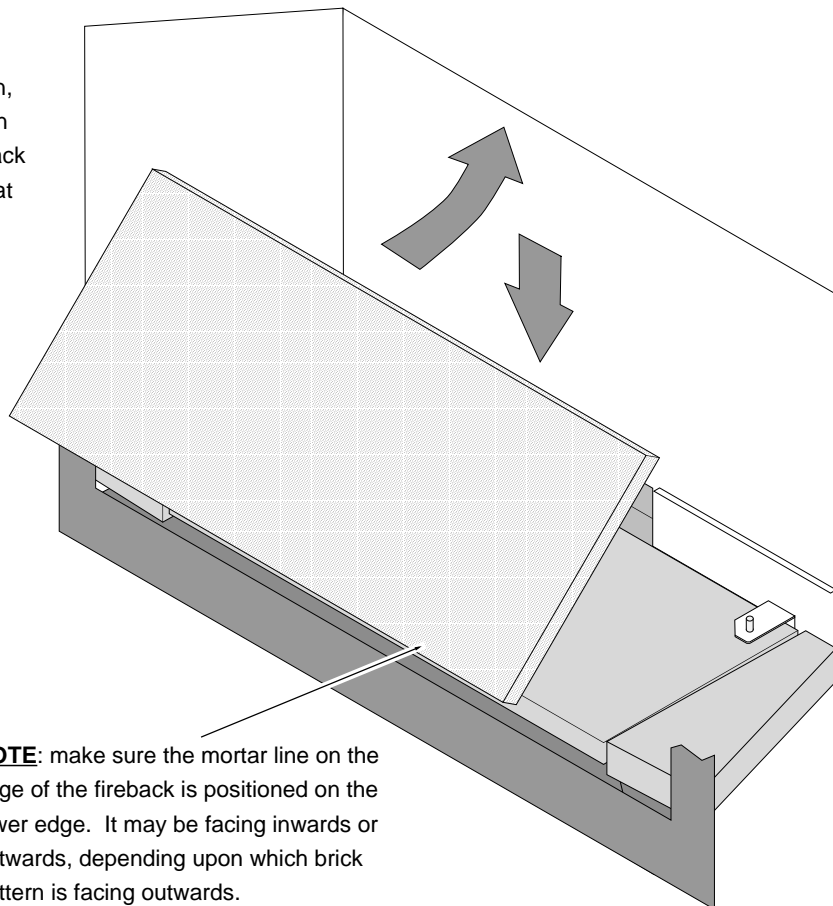

NOTE: make sure the mortar line on the edge of the fireback is positioned on the lower edge. It may be facing inwards or outwards, depending upon which brick pattern is facing outwards.

- 5 On the DVL GSR, return the accent light to the correct configuration.



DVL GSR / 33 DVI Firebacks (2-Sided)

SKU # 96100150 - Brick or Herringbone

- 6 Install the side firebacks following the directions to the right.
- 7 Replace the burner and restore the appliance to the correct configuration.

